



Replacement Sheet

FIG. 3

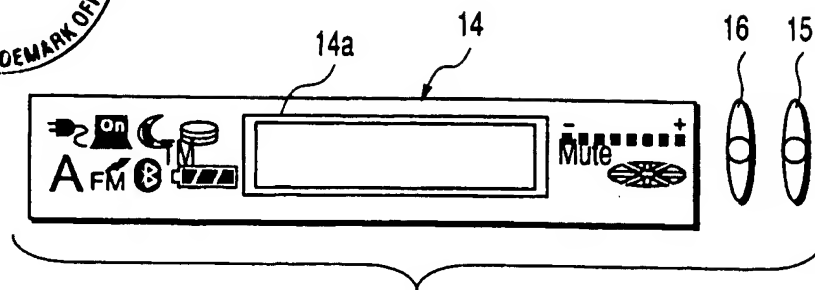


FIG. 4


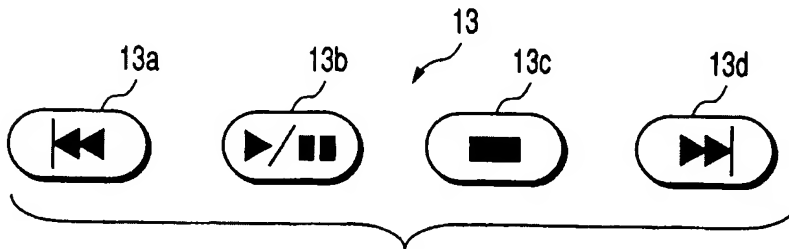


FIG. 5

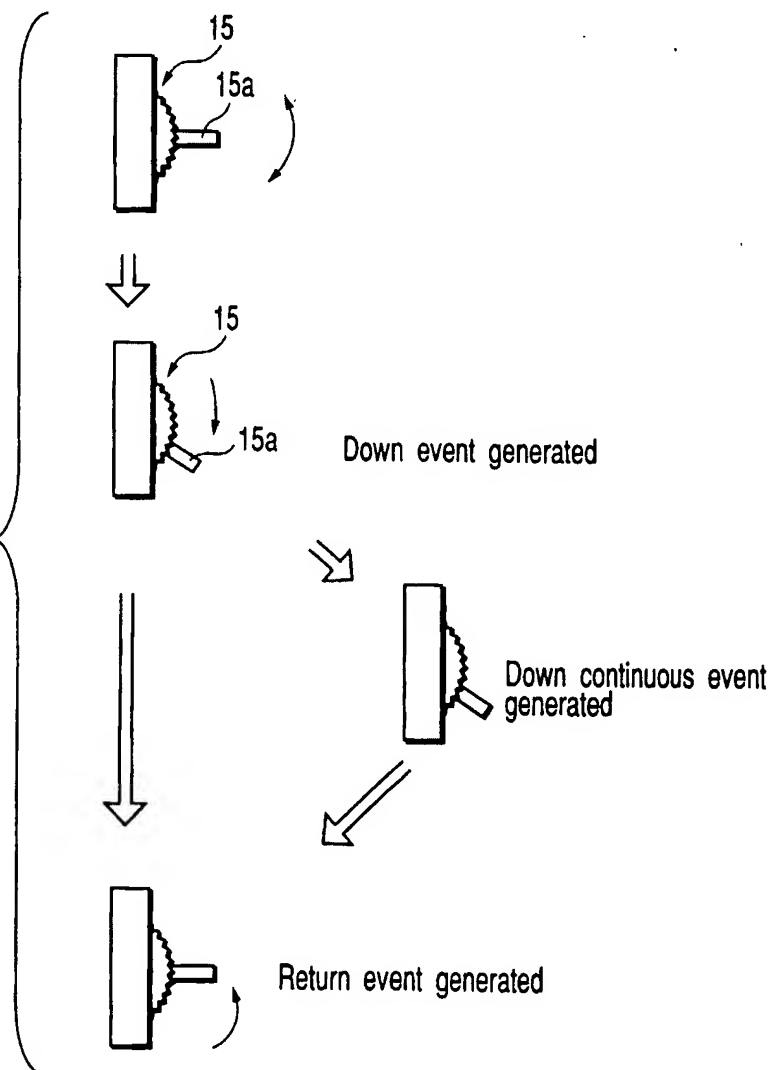

Replacement Sheet

Sub-display property setup window

Setup item	▼ Low battery
Backlight color	▼ Green
Flickering	▼ ON
Message change	▼ OFF
Message cancel time	▼ 1 min
Message contents	

Low battery

OK Cancel

FIG. 10

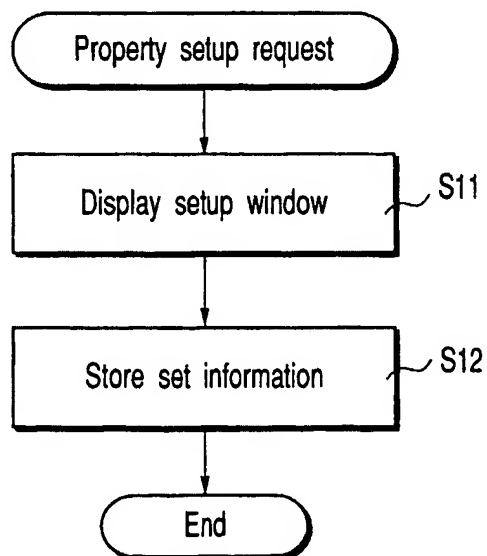


FIG. 11

Replacement Sheet

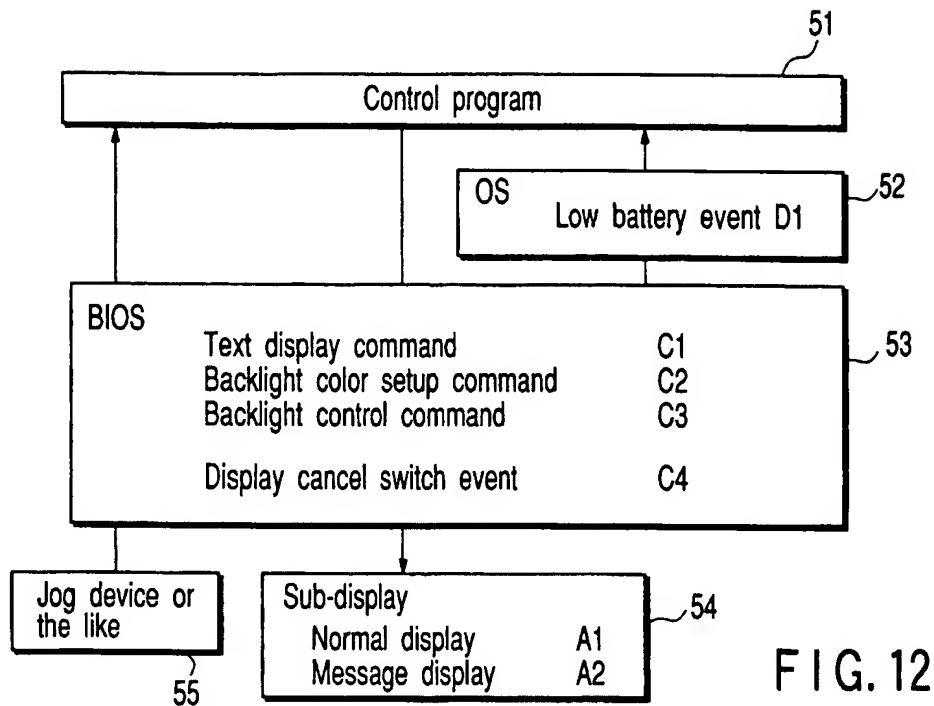


FIG. 12

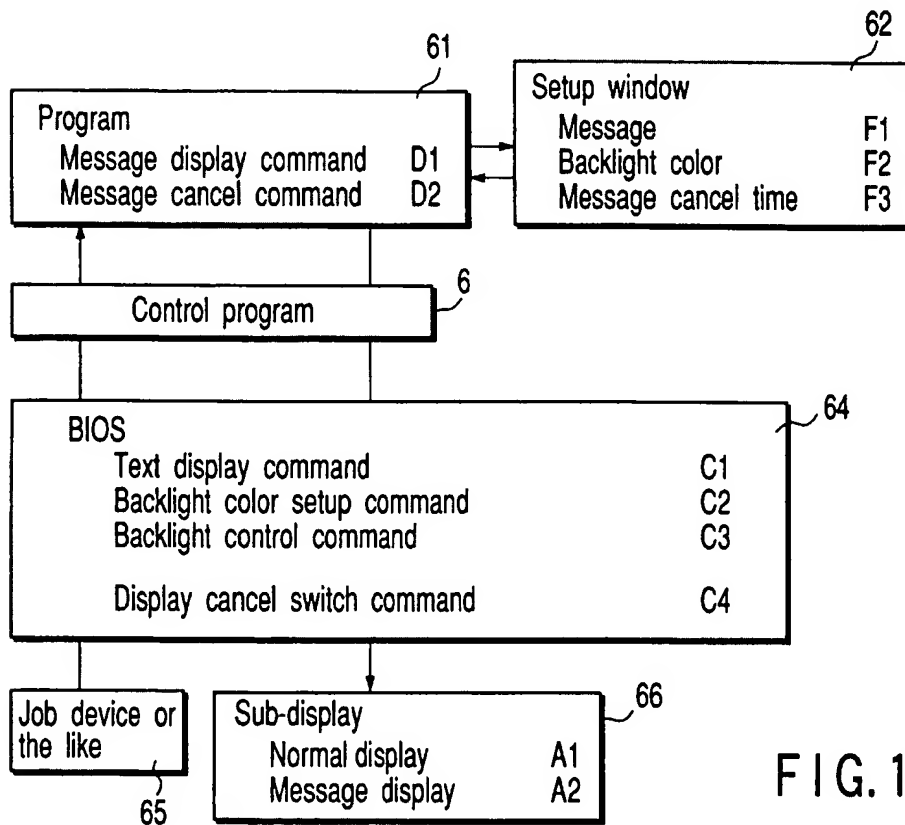


FIG. 13

Replacement Sheet

(When system is OFF or is sleeping, and status indicates new arrival mail or owner string)

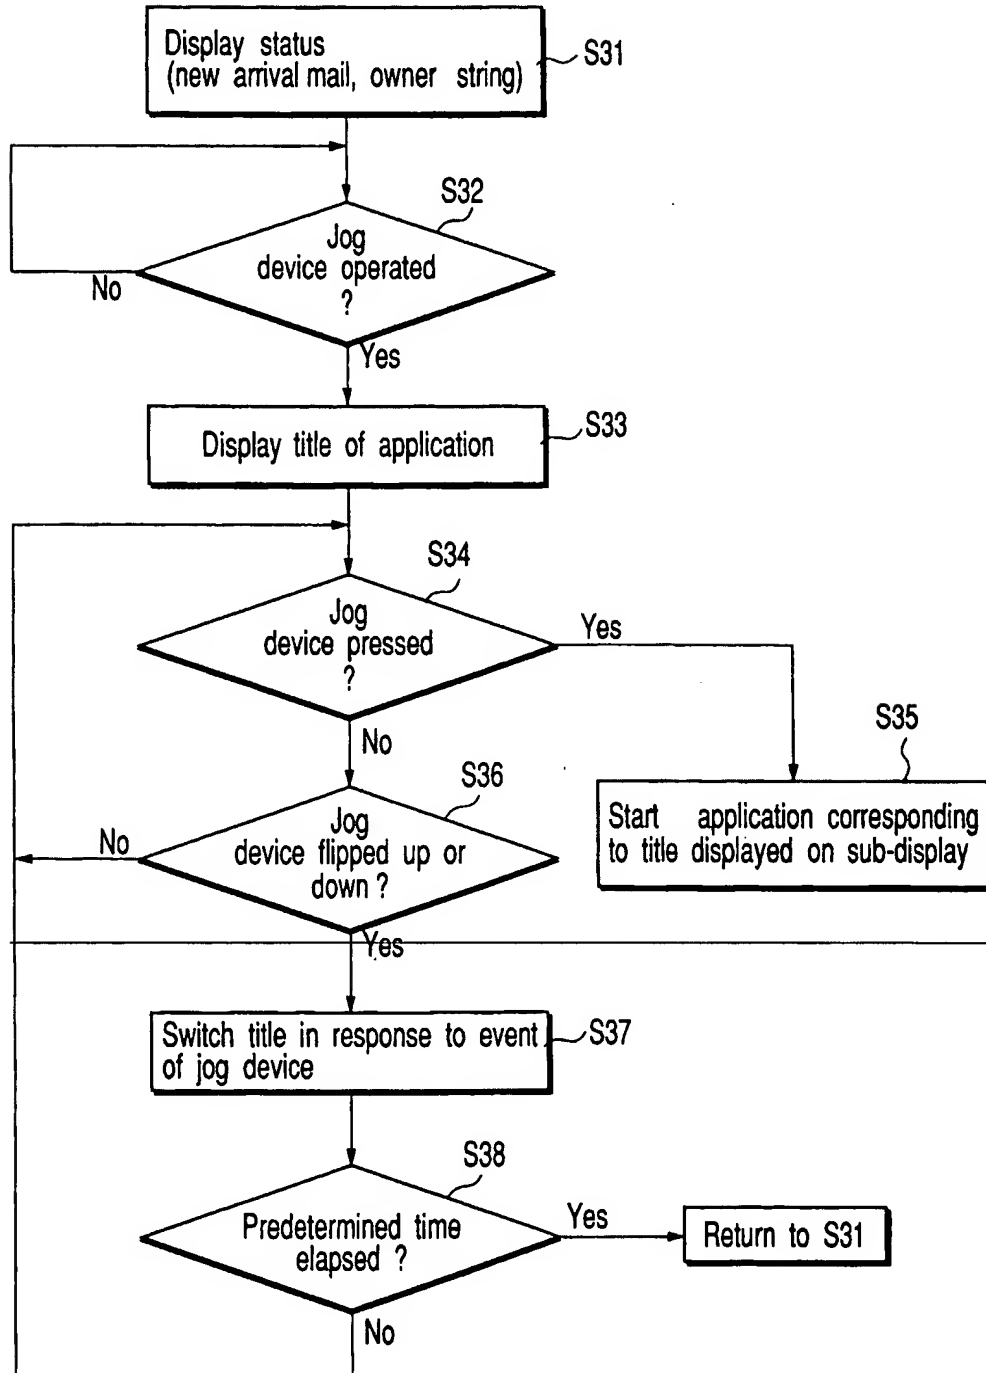


FIG. 21

Replacement Sheet

(When system is ON and no status display is made)

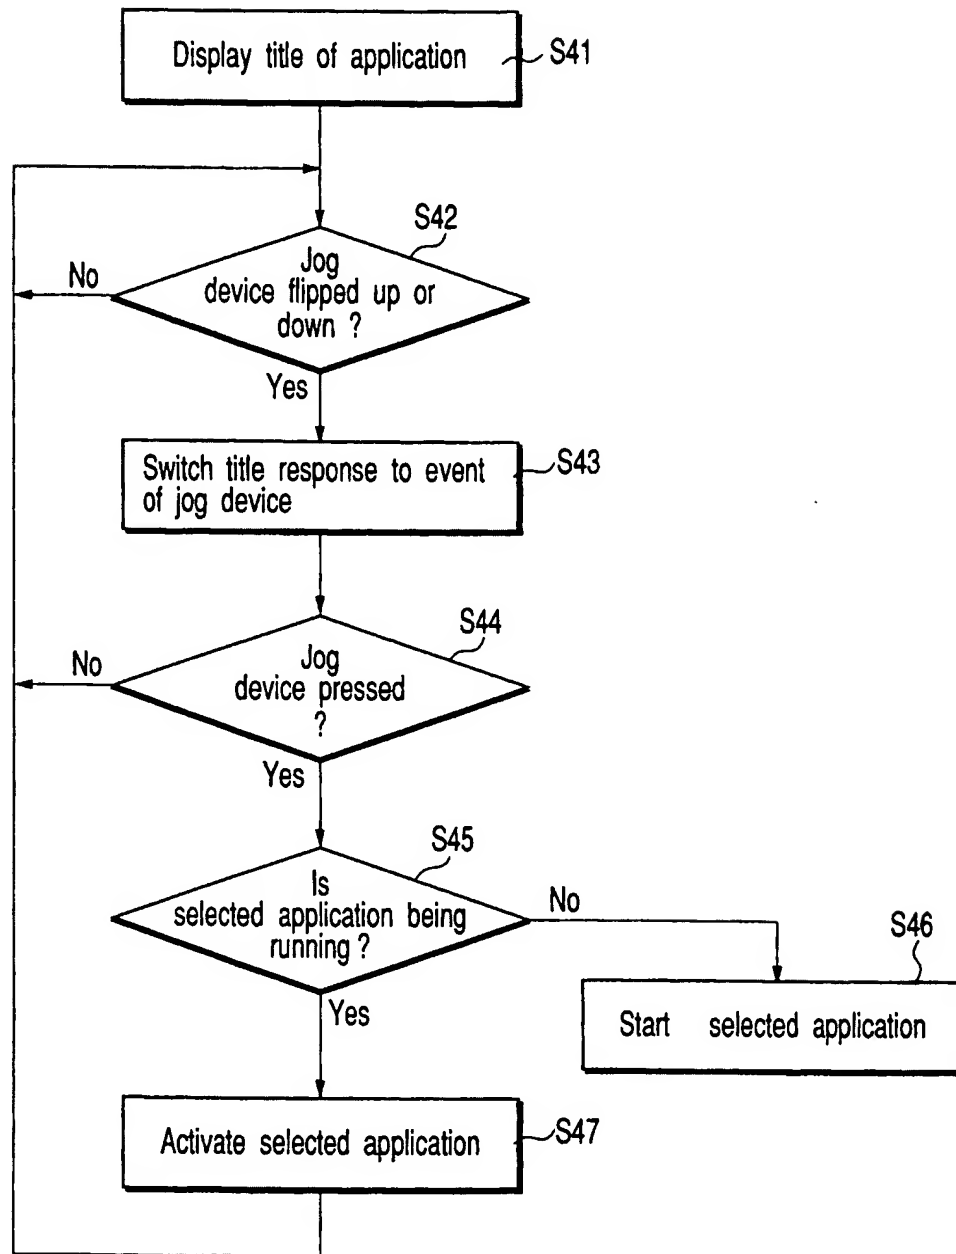


FIG. 24

Replacement Sheet

(When system is ON and status indicates new arrival mail or owner string)

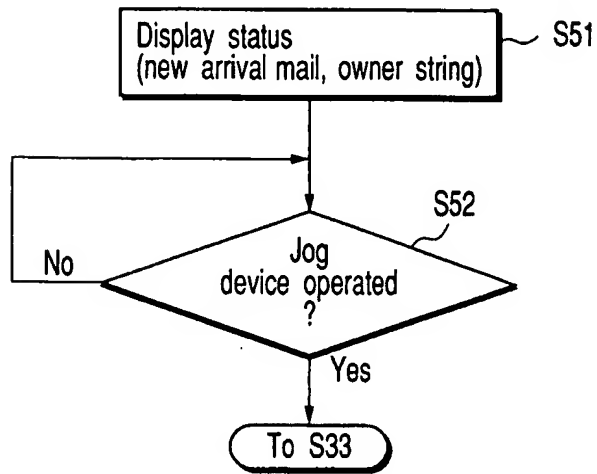


FIG. 25

(When system is ON, status indicates new arrival mail or owner string, and application is to be ended)


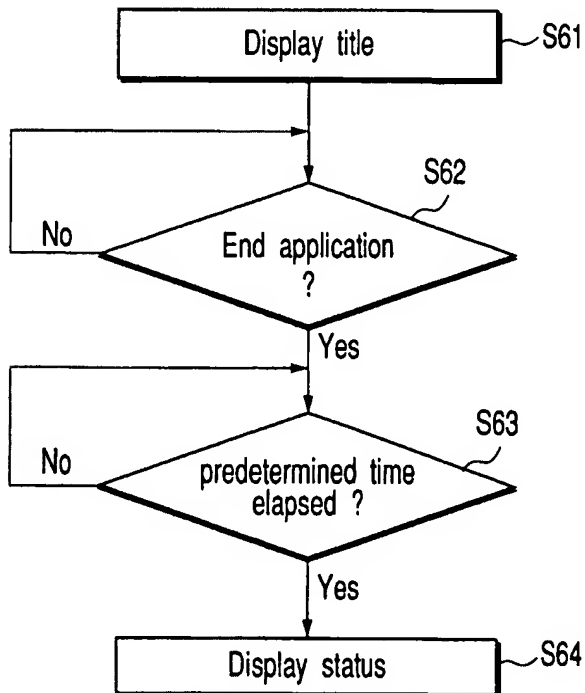


FIG. 26

Replacement Sheet

(When system is ON, status indicates new arrival mail or owner string, and application is to be started from start menu)

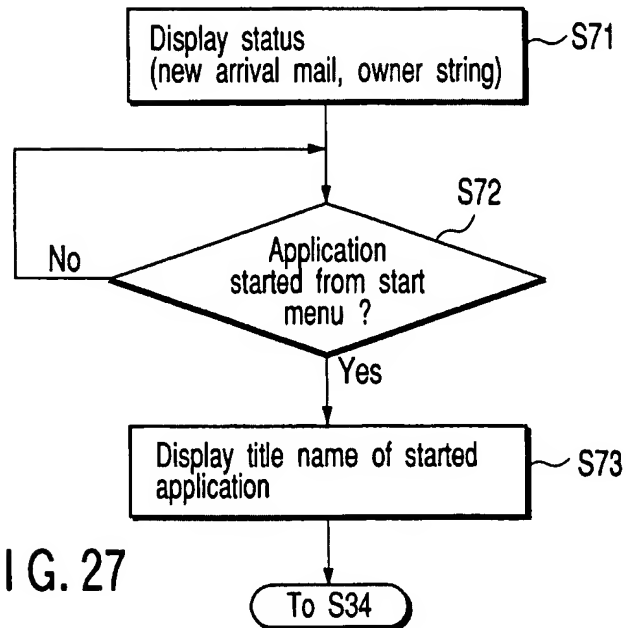

[Started and operation of application]

System state	Status display	Operation
OFF, sleep	None	Start by single action by pressing select jog
		Select application by select jog and then start application
	New arrival mail or owner string	Select application by select jog and then start application
ON	None	Select, start and switch application by select jog
		Select, start and switch application by select jog
	New arrival mail or owner string	Start application from start menu
		End application

FIG. 28